

A Read this manual carefully before operating this vehicle.

A Il convient de lire attentivement ce manuel avant la première utilisation du véhicule.

A Bitte lesen Sie diese Bedienungsanleitung sorgfältig durch, bevor Sie das Fahrzeug in Betrieb nehmen.

OWNER'S MANUAL MANUEL DU PROPRIÉTAIRE BEDIENUNGSANLEITUNG

YZ85(Z) YZ85LW(Z)

5PA-28199-88






A Read this manual carefully before operating this vehicle.

OWNER'S MANUAL

YZ85(Z) YZ85LW(Z)

5PA-28199-88-E0

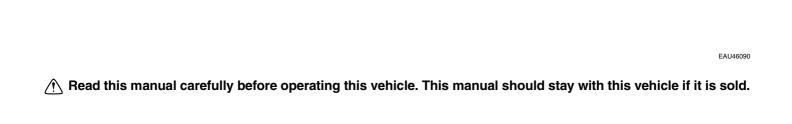

INTRODUCTION

EAU41544

Congratulations on your purchase of the Yamaha YZ85(Z)/YZ85LW(Z). This model is the result of Yamaha's vast experience in the production of fine sporting, touring, and pacesetting racing machines. It represents the high degree of craftsmanship and reliability that have made Yamaha a leader in these fields.

This manual will give you an understanding of the operation, inspection, and basic maintenance of this motorcycle. If you have any questions concerning the operation or maintenance of your motorcycle, please consult a Yamaha dealer.

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.



Please read this manual carefully and completely before operating this motorcycle.

EWA14351

EWA10031

WARNING

This motorcycle is designed and manufactured for off-road use only. It is illegal to operate this motorcycle on any public street, road or highway. Such use is prohibited by law. This motorcycle complies with almost all state off-highway noise level and spark arrester laws and regulations. Please check your local riding laws and regulations before operating this motorcycle.

AN IMPORTANT SAFETY MESSAGE:

- Read this manual completely before operating your motorcycle. Make sure you understand all instructions.
- Pay close attention to the warning and notice labels on the motorcycle.
- Never operate a motorcycle without proper training or instruction.

INTRODUCTION

AN IMPORTANT NOTE TO PARENTS:

This motorcycle is not a toy. Before you let your child ride this motorcycle, you should understand the instructions and warnings in this Owner's Manual. Then be sure your child understands and will follow them. Children differ in skills, physical abilities, and judgment. Some children may not be able to operate a motorcycle safely. Parents should supervise their child's use of the motorcycle at all times. Parents should permit continued use only if they determine that the child has the ability to operate the motorcycle safely.

Motorcycles are single track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.

IMPORTANT MANUAL INFORMATION

EAU10132

Particularly important information is distinguished in this manual by the following notations:

\triangle	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.	
▲ WARNING	A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to t vehicle or other property.	
TIP	A TIP provides key information to make procedures easier or clearer.	

IMPORTANT MANUAL INFORMATION

EAU10200

YZ85(Z)/YZ85LW(Z)
OWNER'S MANUAL
©2009 by Yamaha Motor Co., Ltd.
1st edition, May 2009
All rights reserved.
Any reprinting or unauthorized use without the written permission of Yamaha Motor Co., Ltd. is expressly prohibited.
Printed in Japan.

TABLE OF CONTENTS

LOCATION OF IMPORTANT	FOR YOUR SAFETY -	Checking the shift pedal7-19
LABELS1-1	PRE-OPERATION CHECKS 5-1	Checking the front and rear brake
		pads7-19
SAFETY INFORMATION2-1	OPERATION AND IMPORTANT	Checking the brake fluid level 7-20
	RIDING POINTS 6-1	Changing the brake fluid7-21
DESCRIPTION 3-1	Starting and warming up a cold	Drive chain slack7-21
Left view3-1	engine 6-1	Cleaning and lubricating the drive
Right view3-2	Starting a warm engine 6-1	chain7-22
Controls and instruments3-3	Shifting 6-2	Checking and lubricating
	Engine break-in 6-3	the cables7-23
INSTRUMENT AND CONTROL	Parking 6-4	Checking and lubricating
FUNCTIONS4-1	·	the throttle grip and cable7-23
Handlebar switch4-1	PERIODIC MAINTENANCE AND	Checking and lubricating
Clutch lever4-1	ADJUSTMENT 7-1	the brake and clutch levers 7-23
Shift pedal4-1	Periodic maintenance and	Checking and lubricating
Brake lever4-2	lubrication chart 7-2	the brake pedal7-24
Brake pedal4-2	Checking the spark plug 7-8	Lubricating the swingarm pivots 7-24
Fuel tank cap4-3	Transmission oil 7-9	Lubricating the rear suspension 7-25
Fuel4-3	Coolant 7-10	Checking the front fork7-25
Fuel tank breather hose4-5	Cleaning the air filter element 7-12	Checking the steering7-26
Fuel cock4-5	Adjusting the carburetor 7-14	Checking the wheel bearings7-26
Starter (choke) knob4-6	Adjusting the engine idling	Supporting the motorcycle7-26
Kickstarter4-6	speed 7-14	Front wheel7-27
Seat4-7	Adjusting the throttle cable free	Rear wheel7-28
Adjusting the front fork4-7	play 7-14	Troubleshooting7-29
Front fork bleeding4-9	Tires 7-15	Troubleshooting charts7-31
Adjusting the shock absorber	Spoke wheels7-17	
assembly4-9	Adjusting the clutch lever free	MOTORCYCLE CARE AND
Removable sidestand4-12	play 7-17	STORAGE 8-1
	Checking the front brake lever	Matte color caution8-1
	free play 7-18	Care8-1

TABLE OF CONTENTS


Storage	8-3
SPECIFICATIONS	9-
CONSUMER INFORMATION	10-
Identification numbers	10-1

LOCATION OF IMPORTANT LABELS

EAU48112

Read and understand all of the labels on your vehicle. They contain important information for safe and proper operation of your vehicle. Never remove any labels from your vehicle. If a label becomes difficult to read or comes off, a replacement label is available from your Yamaha dealer.

For Canada

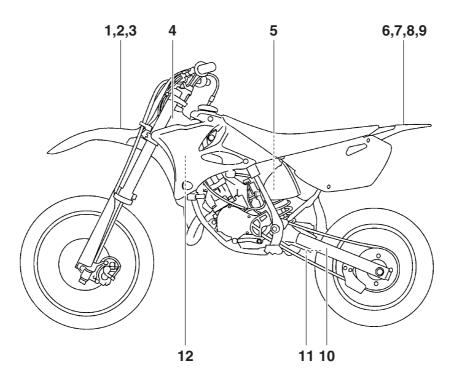

For Canada

1

Use premium unleaded gasoline/oil premix only.

3XJ-2415E-A1

3

THIS VEHICLE IS A COMPETITION MOTORCYCLE AND IS FOR USE EXCLUSIVELY IN CLOSED COURSE COMPETITION AND IS NOT INTENDED FOR USE ON PUBLIC HIGHWAYS.

CE VÉHICULE EST UNE MOTOCYCLETTE DE COMPÉTITION DONT L'USAGE EST RÉSERVÉ AUX COMPÉTITIONS EN CIRCUITS FERMÉS ET NON DESTINÉ AUX VOIES PUBLIQUES.

4SR-2416E-00

5

A WARNING

This unit contains high pressure nitrogen gas. Mishandling can cause explosion.

- Read owner's manual for instructions.
- Do not incinerate, puncture or open.

A AVERTISSEMENT

Cette unité contient de l'azote à haute pression. Une mauvaise manipulation peut entraîner d'explosion.

- Voir le manuel d'utilisateur pour les instructions.
- Ne pas brûler ni perforer ni ouvrir.

4AA-22259-60

Utiliser de préférence un mélange huile/super sans plomb.

3XJ-2415E-B1

4

This spark ignition system meets all requirements of the Canadian Interference Causing Equipment Regulations.

Ce système d'allumage par étincelle de véhicule respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada

3JK-82377-00

6

▲ WARNING

Riding as a passenger can cause the vehicle to go out of control.

Loss of control can cause a collision or rollover, which can result in severe injury or death.

NEVER ride as a passenger.

3XJ-2151H-A1

LOCATION OF IMPORTANT LABELS

For Canada

7

A AVERTISSEMENT

Un passager pourrait causer une perte de contrôle du véhicule.

Une perte de contrôle peut provoquer une collision ou un renversement, résultant en des blessures sérieuses, voire mortelles.

AUCUN passager permis.

3XJ-2151H-B1

9

A AVERTISSEMENT

- LIRE LE MANUEL DU PROPRIETAIRE AINSI QUE TOUTES LES ETIQUETTES AVANT D'UTILISER CE VEHICULE.
- NE JAMAIS TRANSPORTER DE PASSAGER. La conduite avec passager augmente les risques de perte de contrôle.
- NE JAMAIS ROULER SUR DES CHEMINS PUBLICS.
 Vous pourriez entrer en collision avec un autre véhicule.
- TOUJOURS PORTER UN CASQUE DE MOTOCYCLISTE APPROUVE, des lunettes et des vêtements de protection.
- EXCLUSIVEMENT POUR L'USAGE D'UN CONDUCTEUR

5PA-2118K-10

11

EXPERIMENTE

INFORMATION SUR LES PNEUS

La pression des pneus à froid doit normalement être réglée comme suit.

AVANT: 100kPa, {1.00kgf/cm²}, 15psi ARRIERE: 100kPa, {1.00kgf/cm²}, 15psi

3RV-21668-B0

8

WARNING

- BEFORE YOU OPERATE THIS VEHICLE, READ THE OWNER'S MANUAL AND ALL LABELS.
- NEVER CARRY A PASSENGER. You increase your risk of losing control if you carry a passenger.
- NEVER OPERATE THIS VEHICLE ON PUBLIC ROADS. You can collide with another vehicle if you operate this vehicle on a public road.
- ALWAYS WEAR AN APPROVED MOTORCYCLE HELMET, eye protection, and protective clothing.
 EXPERIENCED RIDER ONLY.

5PA-2118K-00

10

TIRE INFORMATION

Cold tire normal pressure should be set as follows. FRONT: 100kPa, {1.00kgf/cm²}, 15psi

REAR: 100kPa, {1.00kgf/cm²}, 15psi


3RV-21668-A0

12

1-3



For Europe

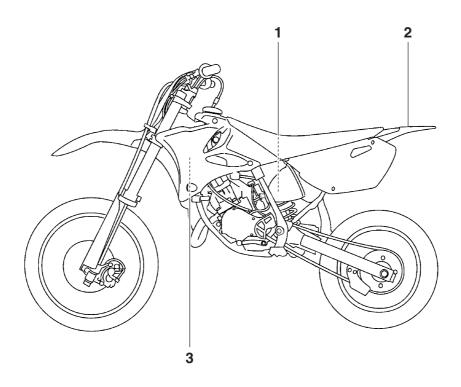


For Europe

1





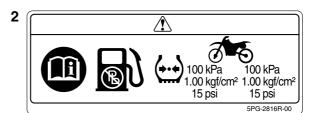

Familiarize yourself with the following pictograms and read the explanatory text.



Read the Owner's manual.



Use unleaded gasoline only.



This unit contains high-pressure nitrogen gas. Mishandling can cause explosion. Do not incinerate, puncture or open.



Measure tire pressure when tires are cold.



Turn off the main switch after riding to avoid draining the battery.




*.** kaf/cm²

Adjust tire pressure. Improper tire pressure can cause loss of control. Loss of control can result in * ** kgf/cm² severe injury or death.

* ** psi

For Oceania and South Africa

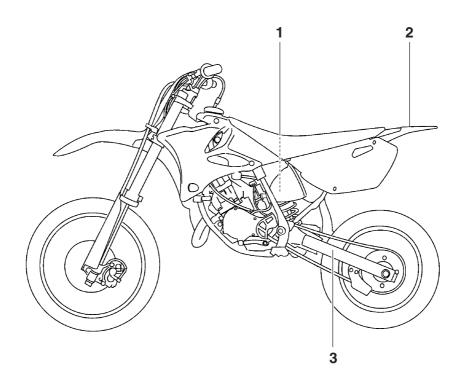

For Oceania and South Africa



3

TIRE INFORMATION

Cold tire normal pressure should be set as follows. FRONT: 100kPa, {1.00kgf/cm²}, 15psi REAR: 100kPa, {1.00kgf/cm²}, 15psi

3RV-21668-A0





- Before you operate this vehicle, read the owner's manual.
- Prima di usare il veicolo, leggete il manuale di istruzioni.
- Lire le manuel du propriétaire avant d'utiliser ce véhicule.
- Lesen Sie die Bedienungsanleitung bevor Sie dieses Fahrzeug fahren.
- Antes de conducir este vehículo, lea el Manual del Propietario.

5PA-21568-01

A SAFETY INFORMATION

EAU41462

Safe Riding

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. See page 5-1 for a list of pre-operation checks.

- This motorcycle is designed for offroad use only, therefore, it is illegal to operate it on public streets, roads, or highways, even a dirt or gravel one. Off-road use on public lands may be illegal. Please check local regulations before riding.
- This motorcycle is designed to carry the operator only. No passengers.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents.
 Many accidents have been caused by an automobile driver who did not see the motorcycle. Making

yourself conspicuous appears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Many accidents involve inexperienced operators.
 - Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
 - Know your skills and limits.
 Staying within your limits may help you to avoid an accident.
 - We recommend that you practice riding your motorcycle until you have become thoroughly familiar with the motorcycle and all of its controls.

⚠ SAFETY INFORMATION

- Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed). Never travel faster than warranted by conditions.
- Ride cautiously in unfamiliar areas. You may encounter hidden obstacles that could cause an accident.
- The posture of the operator is important for proper control. The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
- Never ride under the influence of alcohol or other drugs.
- Be sure the transmission is in neutral before starting the engine.

Protective apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

- Always wear an approved helmet.
- Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
- The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
- Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.

⚠ SAFETY INFORMATION

 Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle. Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under "Loading" when mounting accessories.

 Never install accessories that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation.

- Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.
- Bulky or large accessories may seriously affect the stability of the motorcycle. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds.
- Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability, therefore, such accessories are not recommended.
- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an

SAFETY INFORMATION


electric failure could result, which could cause a dangerous loss of lights or engine power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. Refer to page 7-15 for tire specifications and more information on replacing your tires.

EAU10410


Left view

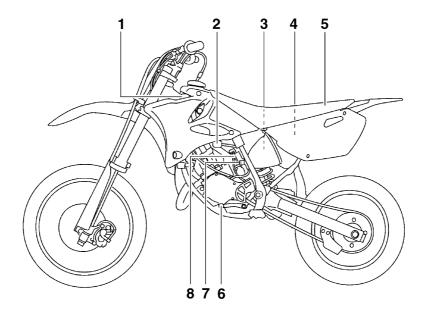

- 1. Radiator cap (page 7-10)
- 2. Fuel cock (page 4-5)
- 3. Shock absorber assembly spring preload adjusting nut (page 4-9)
- 4. Air filter element (page 7-12)
- 5. Seat (page 4-7)
- 6. Shift pedal (page 4-1)
- 7. Throttle stop screw (page 7-14)
- 8. Starter (choke) knob (page 4-6)

3

Right view

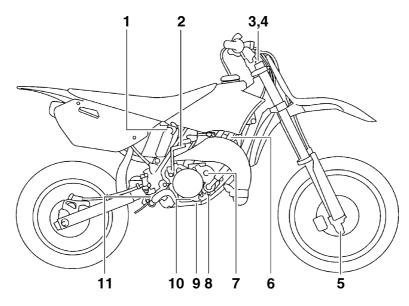


- Shock absorber assembly compression damping force adjusting screw (page 4-9)
- 2. Kickstarter (page 4-6)
- 3. Front fork rebound damping force adjusting screw (page 4-7)
- 4. Bleed screw (page 4-9)
- 5. Front fork compression damping force adjusting screw (page 4-7)
- 6. Spark plug cap (page 7-8)
- 7. Transmission oil filler cap (page 7-9)
- 8. Coolant drain bolt (page 7-11)

- 9. Brake pedal (page 4-2)
- 10. Transmission oil drain bolt (page 7-9)
- 11. Shock absorber assembly rebound damping force adjusting screw (page 4-9)

EAU10430

Controls and instruments

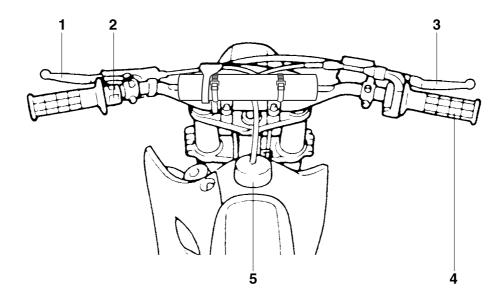

- 1. Clutch lever (page 4-1)
- 2. Engine stop button (page 4-1)
- 3. Brake lever (page 4-2)
- 4. Throttle grip (page 7-14)
- 5. Fuel tank cap (page 4-3)

Handlebar switch


EAU40660

Clutch lever

EAU12850

Shift pedal

EAU12870

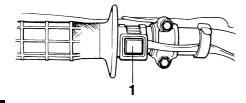


1. Engine stop button "ENGINE STOP"

"ENGINE STOP" button


EAU12670

Hold this button pushed until the engine stops in case of an emergency, such as when the vehicle overturns or when the throttle cable is stuck.

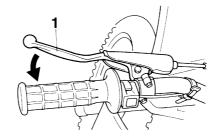

1. Clutch lever

The clutch lever is located at the left handlebar grip. To disengage the clutch, pull the lever toward the handlebar grip. To engage the clutch, release the lever. The lever should be pulled rapidly and released slowly for smooth clutch operation.

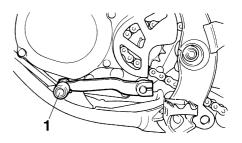

1. Shift pedal

The shift pedal is located on the left side of the engine and is used in combination with the clutch lever when shifting the gears of the 6-speed constant-mesh transmission equipped on this motorcycle.


EAU12941

INSTRUMENT AND CONTROL FUNCTIONS

Brake lever

The brake lever is located at the right handlebar grip. To apply the front brake, pull the lever toward the handlebar grip.

EAU41261

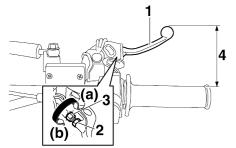

- 1. Brake lever
- 2. Locknut
- 3. Adjusting bolt
- 4. Distance between brake lever and handlebar grip

The brake lever is equipped with a position adjusting bolt. Adjust the distance between the brake lever and the handlebar grip as follows.

1. Loosen the locknut.


While holding the lever pushed away from the handlebar grip, turn the adjusting bolt in direction (a) to increase the distance, and in direction (b) to decrease it.

Distance between the brake lever and the handlebar grip:

Minimum (shortest): 76 mm (2.99 in) Standard: 95 mm (3.74 in) Maximum (longest): 97 mm (3.82 in)

3. Tighten the locknut.

Brake pedal

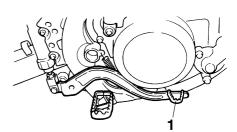


1. Brake pedal

The brake pedal is on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

EAU13182

Fuel tank cap

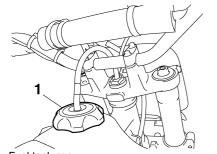

1. Fuel tank cap

To remove the fuel tank cap, turn it counterclockwise, and then pull it off. To install the fuel tank cap, insert it into the tank opening, and then turn it clockwise.

EWA11091

WARNING

Make sure that the fuel tank cap is properly closed after filling fuel. Leaking fuel is a fire hazard.

Fuel

This motorcycle has been designed to use a premixed fuel of gasoline and 2-stroke engine oil. Always mix the gasoline and oil in a clean container before filling the fuel tank.

ECA15601

EAU41833

NOTICE

Always use fresh gasoline, and fill the fuel tank with a fresh mix just before riding. Do not use premixed fuel that is more than a few hours old.

Mixing gasoline and 2-stroke engine oil

Pour 2-stroke engine oil into a clean container, and then add gasoline. To mix the fuel thoroughly, shake the container from side to side.

d to 1 2aso- 3



- 1. 2-stroke engine oil
- 2. Gasoline
- 3. Container

Recommended fuel:

Premium unleaded gasoline only

Recommended 2-stroke engine oil: See page 9-1.

Fuel tank capacity:

5.0 L (1.32 US gal, 1.10 Imp.gal) **Mixing ratios (gasoline to oil):**

Break-in period: 15:1

After break-in: 30:1

ECA15590

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the piston rings as well as to the exhaust system.

Your Yamaha engine has been designed to use premium unleaded gasoline with a pump octane number [(R+M)/2] of 91 or higher, or a research octane number of 95 or higher. If knocking (or pinging) occurs, use a gasoline of a different brand.

If the recommended 2-stroke engine oil is not available, use an equivalent oil.


CA15551

NOTICE

Never mix two brands of 2-stroke engine oil in the same batch. Always use the same type of oil to ensure maximum engine performance.

Should it be necessary to use a different oil brand, be sure to drain the fuel tank and the carburetor float chamber of the old premixed fuel prior to filling with the new type.

Filling the fuel tank

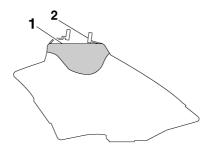

- Maximum fuel level
- 2. Fuel tank filler tube

Make sure there is sufficient gasoline in the tank.

EWA10881

WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or

- other sources of ignition such as the pilot lights of water heaters and clothes dryers.
- Do not overfill the fuel tank. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.
- 3. Wipe up any spilled fuel immediately. *NOTICE:* Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts. [ECA10071]
- 4. Be sure to securely close the fuel tank cap.


EWA15151

WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immediately. If gasoline spills on your skin,

wash with soap and water. If gasoline spills on your clothing, change your clothes.

Fuel tank breather hose

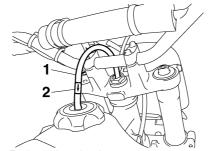

- 1. Fuel tank breather hose
- 2. One-way valve

Before operating the motorcycle:

- Check the fuel tank breather hose connection.
- Check the fuel tank breather hose for cracks or damage, and replace it if damaged.
- Make sure that the end of the fuel tank breather hose is not blocked. and clean it if necessary.

TIP

If the fuel tank breather hose falls out. reinstall it on the fuel tank cap with the arrow mark on the one-way valve pointed downward as shown.

EAU41280


Fuel cock

The fuel cock supplies fuel from the tank to the carburetor while filtering it al-SO.

The fuel cock has two positions:

OFF

EAU41360

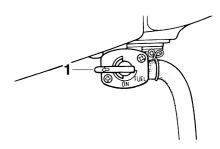

1. Arrow mark positioned over "OFF"


With the lever in this position, fuel will not flow. Always return the lever to this position when the engine is not running.

EAU13650

INSTRUMENT AND CONTROL FUNCTIONS

EAU13640


ON

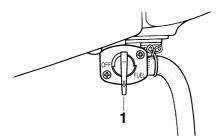

1. Arrow mark positioned over "ON"

With the lever in this position, fuel flows to the carburetor. Normal riding is done with the lever in this position.

Starter (choke) knob

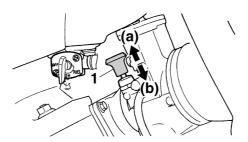


1. Starter (choke) knob

Starting a cold engine requires a richer air-fuel mixture, which is supplied by the starter (choke).

Move the knob in direction (a) to turn on the starter (choke).

Move the knob in direction (b) to turn off the starter (choke).

Kickstarter

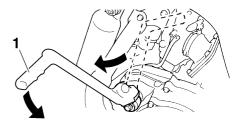

1. Kickstarter lever


To start the engine, fold out the kickstarter lever, move it down lightly with your foot until the gears engage, and then push it down smoothly but forcefully. This model is equipped with a primary kickstarter, allowing the engine to be started in any gear if the clutch is disengaged. However, shifting the transmission into the neutral position before starting is recommended.

Seat

EAU46280

To remove the seat


Remove the bolts, and then pull the seat off.

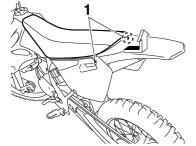

1. Bolt

To install the seat

 Fit the slot in the seat onto the projection on the fuel tank, and insert the projection on the seat into the seat holder as shown.

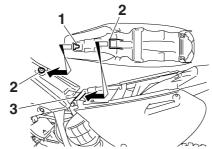

- 1. Slot
- 2. Projection
- 3. Seat holder
- 2. Place the seat in the original position, and then tighten the bolts.

TIP_

Make sure that the seat is properly secured before riding.

Adjusting the front fork

EAU41471

EWA10180

WARNING

Always adjust both fork legs equally, otherwise poor handling and loss of stability may result.


This front fork is equipped with rebound damping force adjusting screws and compression damping force adjusting screws.

ECA10101

NOTICE

To avoid damaging the mechanism, do not attempt to turn beyond the maximum or minimum settings.

Rebound damping force

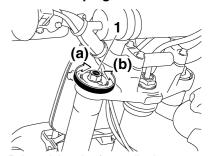

1. Rebound damping force adjusting screw

To increase the rebound damping force and thereby harden the rebound damping, turn the adjusting screw on each fork leg in direction (a). To decrease the rebound damping force and thereby soften the rebound damping, turn the adjusting screw on each fork leg in direction (b).

Rebound damping setting:


Minimum (soft):

20 click(s) in direction (b)* Standard:

7 click(s) in direction (b)*
Maximum (hard):

- 1 click(s) in direction (b)*
- * With the adjusting screw fully turned in direction (a)

Compression damping force

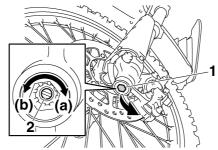

- Rubber cap
- 2. Compression damping force adjusting screw
 - 1. Remove the rubber cap by pulling it out of the front fork leg.
 - To increase the compression damping force and thereby harden the compression damping, turn the adjusting screw on each fork leg in direction (a). To decrease the compression damping force and thereby soften the compression damping, turn the adjusting screw on each fork leg in direction (b).

Compression damping setting:

Minimum (soft):

20 click(s) in direction (b)* Standard:

YZ85(Z): 10 click(s) in direction

YZ85LW(Z): 9 click(s) in direction (b)*


Maximum (hard):

- 1 click(s) in direction (b)*
- * With the adjusting screw fully turned in direction (a)
- 3. Install the rubber cap.

TIP_

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

Front fork bleeding

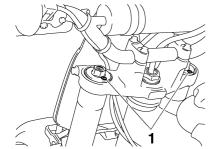

1. Bleed screw

EWA10200

WARNING

Always bleed both fork legs, otherwise poor handling and loss of stability may result.

When riding in extremely rough conditions, the air temperature and pressure in the front fork will rise. This will increase the spring preload and harden the front suspension. If this occurs, bleed the front fork as follows.

1. Elevate the front wheel by placing a suitable stand under the engine.

EAU14791

TIP

When bleeding the front fork, there should be no weight on the front end of the vehicle.

- 2. Remove the bleed screws and allow all of the air to escape from each fork leg.
- 3. Install the bleed screws.

EAU41332

Adjusting the shock absorber assembly

This shock absorber assembly is equipped with a spring preload adjusting nut, a rebound damping force adjusting screw and a compression damping force adjusting screw.

ECA10101


NOTICE

To avoid damaging the mechanism, do not attempt to turn beyond the maximum or minimum settings.

Spring preload


Adjust the spring preload as follows.

Loosen the locknut.

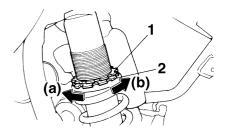

- 1. Locknut
- 2. Spring preload adjusting nut

- To increase the spring preload and thereby harden the suspension, turn the adjusting nut in direction (a). To decrease the spring preload and thereby soften the suspension, turn the adjusting nut in direction (b).
 - A special wrench can be obtained at a Yamaha dealer to make this adjustment.
 - The spring preload setting is determined by measuring distance A, shown in the illustration. The longer distance A is, the lower the spring preload; the shorter distance A is, the higher the spring preload. With each complete turn of the adjusting nut, distance A is changed by 1.5 mm (0.06 in).

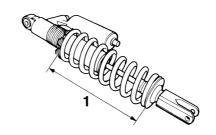

1. Distance A

Spring preload:

Minimum (soft):
Distance A = 218.5 mm (8.60 in)
Standard:YZ85(Z)
Distance A = 215.0 mm (8.46 in)
For Europe only: Distance A = 212.0 mm (8.35 in)
Standard:YZ85LW(Z)
Distance A = 207.0 mm (8.15 in)
For Europe only: Distance A = 212.0 mm (8.35 in)

Maximum (hard): Distance A = 202.5 mm (7.97 in)

3. Tighten the locknut to the specified torque. NOTICE: Always tighten the locknut against the adjusting nut, and then tighten the locknut to the specified torque.


Tightening torque:

Locknut:

35 Nm (3.5 m·kgf, 25 ft·lbf)

Rebound damping force

To increase the rebound damping force and thereby harden the rebound damping, turn the adjusting screw in direction (a). To decrease the rebound damping force and thereby soften the rebound damping, turn the adjusting screw in direction (b).

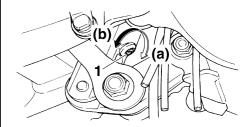

1. Rebound damping force adjusting screw

[ECA10121]

Rebound damping setting:

Minimum (soft):

20 click(s) in direction (b)*

Standard: YZ85(Z)

6 click(s) in direction (b)*

For Europe only: 12 click(s) in di-

rection (b)*

Standard:YZ85LW(Z)

7 click(s) in direction (b)*

For Europe only: 12 click(s) in di-

rection (b)*


Maximum (hard):

1 click(s) in direction (b)*

* With the adjusting screw fully turned in direction (a)

Compression damping force

To increase the compression damping force and thereby harden the compression damping, turn the adjusting screw in direction (a). To decrease the compression damping force and thereby soften the compression damping, turn the adjusting screw in direction (b).

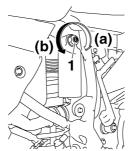

1. Compression damping force adjusting screw

Compression damping setting:

Minimum (soft):

20 click(s) in direction (b)*

Standard:YZ85(Z)

9 click(s) in direction (b)*

For Europe only: 12 click(s) in direction (b)*

Standard: YZ85LW(Z)

7 click(s) in direction (b)*

For Europe only: 12 click(s) in direction (b)*

Maximum (hard):

1 click(s) in direction (b)*

* With the adjusting screw fully turned in direction (a)

TIP

To obtain a precise adjustment, it is advisable to check the actual total number of clicks or turns of each damping force

adjusting mechanism. This adjustment range may not exactly match the specifications listed due to small differences in production.

EWA10221


WARNING

This shock absorber assembly contains highly pressurized nitrogen gas. Read and understand the following information before handling the shock absorber assembly.

- Do not tamper with or attempt to open the cylinder assembly.
- Do not subject the shock absorber assembly to an open flame or other high heat source.
 This may cause the unit to explode due to excessive gas pressure.
- Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
- Do not dispose of a damaged or worn-out shock absorber assembly yourself. Take the shock absorber assembly to a Yamaha dealer for any service.

Removable sidestand

EAU41381

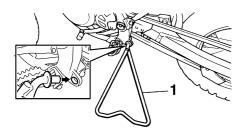

1. Sidestand

This motorcycle is equipped with a removable sidestand.

TIP _____

Make sure that the sidestand is properly secured when the motorcycle is being supported or is being transported.

EWA14601

WARNING

- Never apply force on the motorcycle while it is on the sidestand.
- Always remove the sidestand before starting out.

FOR YOUR SAFETY – PRE-OPERATION CHECKS

EAU15596

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11151

MARNING

Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

ITEM	CHECKS	PAGE
Fuel	 Check fuel level in fuel tank. Always use a fresh mixture of gasoline and oil. Check fuel line for leakage. 	4-3
Transmission oil	Check oil level in transmission case. If necessary, add recommended oil to specified level.	7-9
Coolant	Check coolant level. If necessary, add recommended coolant to specified level. Check cooling system for leakage.	7-10
Front brake	 Check operation. If soft or spongy, have Yamaha dealer bleed hydraulic system. Check brake pads for wear. 	

FOR YOUR SAFETY – PRE-OPERATION CHECKS

ITEM	CHECKS	PAGE
Rear brake	Check operation. If soft or spongy, have Yamaha dealer bleed hydraulic system. Check brake pads for wear. Replace if necessary. Check fluid level in reservoir. If necessary, add recommended brake fluid to specified level. Check hydraulic system for leakage.	7-19, 7-20
Clutch	Check lever free play. Adjust if necessary. Make sure that operation is smooth. Check cable free play.	
Throttle grip		
Drive chain	Check chain slack. Adjust if necessary. Check chain condition. Lubricate if necessary.	7-21, 7-22
Wheels and tires	Check for damage. Check tire condition and tread depth. Check air pressure. Correct if necessary. Check for loose spokes and tighten if necessary.	7-15, 7-17
Shift pedal	Make sure that operation is smooth. Correct if necessary.	7-19
Make sure that operation is smooth. Lubricate pedal pivoting point if necessary.		7-24
Make sure that operation is smooth. Lubricate lever pivoting points if necessary.		7-23
Steering	Check that the handlebar can be turned smoothly and has no excessive play.	7-26

FOR YOUR SAFETY – PRE-OPERATION CHECKS

ITEM	CHECKS	PAGE		
Front fork and rear shock absorber assembly	Check that they operate smoothly and there is no oil leakage.	4-7, 4-9, 4-9, 7-25		
Chassis fasteners	Make sure that all nuts, bolts and screws are properly tightened. Tighten if necessary.	_		
Moving parts and cables	Check that the control cables move smoothly. Check that the control cables are not caught when the handlebars are turned or when the front forks travel up and down. Lubricate moving parts and cables if necessary.	7-23, 7-23, 7-24, 7-25		
Exhaust system	Check that the exhaust pipe is tightly mounted and has no cracks. Check for leakage.	_		
Ignition system	Check that all leads and cables are properly connected.	7-8		

EAU16660

OPERATION AND IMPORTANT RIDING POINTS

FAU15951

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

⚠ WARNING

Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

Starting and warming up a cold engine

- 1. Turn the fuel cock lever to "ON".
- 2. Shift the transmission into the neutral position.
- 3. Turn the starter (choke) on and completely close the throttle. (See page 4-6.)
- 4. Start the engine by pushing the kickstarter lever down. NOTICE: For maximum engine life, never accelerate hard when the engine is cold! [ECA11041]
- 5. When the engine is warm, turn the starter (choke) off.

TIP

The engine is warm when it responds normally to the throttle with the starter (choke) turned off.

EAU41305

Starting a warm engine

Follow the same procedure as for starting a cold engine with the exception that the starter (choke) is not required when the engine is warm. Instead, start the engine with the throttle slightly open.


TIP ____

If the engine does not start after several kicks, try again with the throttle 1/4 to 1/2 open.

OPERATION AND IMPORTANT RIDING POINTS

EAU16671

Shifting

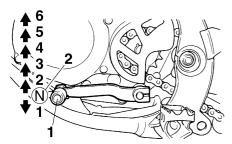

- 1. Shift pedal
- 2. Neutral position

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc.

The gear positions are shown in the illustration.

TIP_

To shift the transmission into the neutral position, press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it.

NOTICE

• Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, and do not tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.

 Always use the clutch while changing gears to avoid damaging the engine, transmission, and drive train, which are not designed to withstand the shock of forced shifting.

EAU16690

ECA10260

To start out and accelerate

- 1. Pull the clutch lever to disengage the clutch.
- 2. Shift the transmission into first gear.
- Open the throttle gradually and simultaneously release the clutch lever slowly.

- Once the motorcycle has reached a speed high enough to change gears, close the throttle, and at the same time, quickly pull the clutch
- Shift the transmission into second gear. (Make sure not to shift the transmission into the neutral position.)
- Open the throttle halfway and gradually release the clutch lever.
- 7. Follow the same procedure when shifting to the next gear.

EAU16710

To decelerate

lever in.

- 1. Close the throttle and apply both the front and the rear brakes to slow the motorcycle.
- Downshift through the gears and shift the transmission into the neutral position when the motorcycle is almost completely stopped.

OPERATION AND IMPORTANT RIDING POINTS

Engine break-in

EAU41503

EWA10321

WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

 Before starting the engine, fill the fuel tank with a break-in oil-fuel mixture as follows.

Recommended 2-stroke engine oil:
See page 9-1.
Mixing ratio (gooding to oil):

Mixing ratio (gasoline to oil): 15:1

- 2. Start and warm up the engine. Check the operation of the controls and the engine stop button. (See page 4-1.)
- Operate the motorcycle in the lower gears at moderate throttle openings for five to eight minutes. Stop the engine and check the spark

plug condition (see page 7-8); it will show a rich condition during break-in.

- 4. Allow the engine to cool. Restart the engine and operate the motorcycle as in the step above for five minutes. Then, very briefly shift to the higher gears and check the full-throttle response. Stop the engine and check the spark plug.
- 5. After again allowing the engine to cool, restart and run the motorcycle for five more minutes. Full throttle and the higher gears may be used, but sustained full-throttle operation should be avoided. Stop the engine and check the spark plug again.
- Allow the engine to cool, remove the cylinder head and cylinder, and inspect the piston and cylinder. Remove any high spots on the piston with #600-grit wet sandpaper. Clean all components and carefully reassemble the cylinder head and cylinder.
- 7. Drain the break-in oil-fuel mixture from the fuel tank and refill with the specified mix. (See page 4-3.)

8. Start the engine and check the operation of the motorcycle throughout its entire operating range. Stop the engine and check the spark plug condition. Restart the motorcycle and ride it for about 10 to 15 more minutes. The motorcycle will now be ready to ride normally.

After the engine break-in period, thoroughly check the motorcycle for loose parts, oil leakage and any other problems. Be sure to inspect and make adjustments thoroughly, especially cable and drive chain slack and loose spokes. In addition, check all fittings and fasteners for looseness, and tighten if necessary.

ECA15560

NOTICE

 When any of the following parts have been replaced, they must be broken in.

Cylinder or crankshaft:

About one hour of break-in operation is necessary.

Piston, rings or transmission gears:

OPERATION AND IMPORTANT RIDING POINTS

These parts require about 30 minutes of break-in operation at half-throttle or less. Observe the condition of the engine carefully during operation.

 If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle. **Parking**

When parking, stop the engine, and then turn the fuel cock lever to "OFF".

WARNING

EAU17191

 Since the engine and exhaust system can become very hot, park in a place where pedestri-

ans or children are not likely to

touch them and be burned.
Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the

 Do not park near grass or other flammable materials which might catch fire.

risk of a fuel leak and fire.

EWA15121

EAU17241

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance and lubrication chart should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10321

MARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.
- Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to death. See page 2-1 for more information about carbon monoxide.

EAU41796

Periodic maintenance and lubrication chart

The following chart is intended as a general guide to maintenance and lubrication. Bear in mind that such factors as weather, terrain, geographical location, and individual usage will alter the required maintenance and lubrication intervals. If you are in doubt as to what intervals to follow in maintaining and lubricating your motorcycle, consult your Yamaha dealer.

TIP

- From the seventh race, repeat the maintenance intervals starting from "Every race".
- Items marked with an asterisk should be performed by a Yamaha dealer as they require special tools, data and technical skills.

N	0.	ITEM	ROUTINE	After break-in	Every race	Every third race	Every fifth race	As required
1	*	Piston	Check piston for carbon deposits and cracks or damage. Clean.	√	V			
			Replace.				√	√
2	*	Piston rings	Check piston ring end gap and rings for damage.	√	$\sqrt{}$			
		Piston rings	Replace.			√		$\sqrt{}$
3	*	Piston pin and small end bearing	Check piston pin and small end bearing for damage.		$\sqrt{}$			
ľ			Replace.					√
		Cylinder head	Check cylinder head for carbon deposits. Clean.	√	V			
4	*		Check cylinder head gasket for damage. Tighten cylinder head nuts if necessary.	√	V			
			Replace cylinder head gasket.					$\sqrt{}$

NO	Э.	ITEM	ROUTINE	After break-in	Every race	Every third race	Every fifth race	As required
5	*	Cylinder	Check cylinder for score marks or wear. Clean.	√	$\sqrt{}$			
		•	Replace.					$\sqrt{}$
6	*	Clutch	Check clutch housing, friction plates, clutch plates and clutch springs for wear or damage. Adjust.	V	V			
			• Replace.					√
		Transmission	Change the transmission oil.	√			√	
7	*		Check transmission for damage.					V
			Replace bearings.					V
8	*	Shift forks, guide bars, shift cam	Check all parts for wear and damage. Replace if necessary.					\checkmark
9	*	Rotor nut (flywheel magneto)	• Tighten.	√			√	
10	*	Kickstarter system	Check idle gear for damage.Replace if necessary.					√
4.4	*	Full accent accents and	Check exhaust pipe and muffler for carbon deposits.	√	\checkmark			
11		Exhaust system	Clean.				√	
10	*	Crankshaft	Check crankshaft for carbon deposits and damage.				√	√
12		Cranksnatt	Clean.				√	√

NO).	ITEM	ROUTINE	After break-in	Every race	Every third race	Every fifth race	As required
10	*		Check carburetor settings and for obstructions.	√	√			
13		Carburetor	Adjust and clean.	√	√			
14		Spark plug	Check condition. Clean and regap.	√	√			
			Replace.					√
15	*	Drive chain	Check chain slack, alignment and condition. Adjust and thoroughly lubricate chain with Yamaha chain and cable lube or equivalent.	V	√			
			Replace.					√
			Check coolant level and for leakage.	√	√			
		•	Check hoses for cracks or damage.		√			
16		Cooling system	Check radiator cap spring operation.					√
			Change coolant.		Every	2 years		√
17	*	Chassis fasteners	Check all chassis fitting and fasteners. Correct or tighten if necessary.	√	V			
	_	A	Clean.	√	√			
18		Air filter element	• Replace.					√
19	*	Frame	Clean and check for damage.	√	√			
20	*	Fuel line	Clean and check for leakage.	√		√		

N	Ο.	ITEM	ROUTINE	After break-in	Every race	Every third race	Every fifth race	As required
21	*	Brakes	 Adjust lever position and pedal height. Lubricate pivot points. Check brake disk surface. Check fluid level and for leakage. Tighten brake disk bolts, caliper bolts, master cylinder bolts and union bolts. 	√	V			
			Replace brake pads.					√
			Replace brake fluid.		Ever	y year		√
22	*	Front fork	 Check operation and for oil leakage. Adjust if necessary. Clean dust seal and lubricate with lithium-soap-based grease. 	√	V			
			Replace fork oil.	√			V	
			Replace oil seals.					√
		Shock absorber assembly	Check operation and adjust. Tighten if necessary.	V	V			
23	*		Lubricate with lithium-soap-based grease.			٧		(After washing the motorcycle or riding in the rain)

N	0.	ITEM	ROUTINE	After break-in	Every race	Every third race	Every fifth race	As required
		Drive chain roller and	Check for wear or damage.					2/
24		support guide	Replace if necessary.					V
0.5		D	Check operation and tighten if necessary.	√	√			
25		Rear suspension	Lubricate with lithium-soap-based grease.	√	√			
			Check operation, free play, and tighten if necessary.	√	\checkmark			
26	*	Steering head	Clean and lubricate with lithium-soap-based grease.				$\sqrt{}$	
			Replace bearings.					$\sqrt{}$
		Tires and wheels	Check tire air pressure, wheel runout, spokes for looseness, and tires for wear.	√	$\sqrt{}$			
			Tighten sprocket bolts if necessary.	√	\checkmark			
27	*		Check wheel bearings for looseness.			√		
			Lubricate wheel bearings with lithium-soap-based grease.			V		
			Replace wheel bearings.					√
28	*	Moving parts and ca- bles	• Lubricate.	√	$\sqrt{}$			
29	*	Throttle grip housing and cable	 Check operation and free play. Adjust the throttle cable free play if necessary. Lubricate the throttle grip housing and cable. 	V	√			

EAU42011

TIP_

- Hydraulic brake service
 - Regularly check and, if necessary, correct the brake fluid levels.

- Every two years replace the internal components of the brake master cylinders and calipers, and change the brake fluid.
- Replace the brake hoses every four years and if cracked or damaged.


FAU19613

Checking the spark plug

The spark plug is an important engine component, which is easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plug should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plug can reveal the condition of the engine.


To remove the spark plug

1. Remove the spark plug cap.

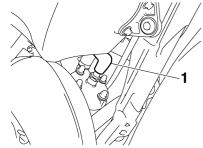

1. Spark plug cap

2. Remove the spark plug as shown, with a spark plug wrench available at a Yamaha dealer.

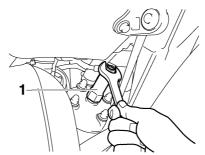

1. Spark plug wrench

To check the spark plug

 Check that the porcelain insulator around the center electrode of the spark plug is a medium-to-light tan (the ideal color when the vehicle is ridden normally).


TIP_

If the spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.

Check the spark plug for electrode erosion and excessive carbon or other deposits, and replace it if necessary.

Specified spark plug: NGK/BR10EG

Measure the spark plug gap with a wire thickness gauge and, if necessary, adjust the gap to specification.

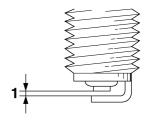

1. Spark plug gap

Spark plug gap:

0.5-0.6 mm (0.020-0.024 in)

To install the spark plug

- Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.
- 2. Install the spark plug with the spark plug wrench, and then tighten it to the specified torque.

Tightening torque:

Spark plug: 20 Nm (2.0 m·kgf, 14 ft·lbf)

TIP __

If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.


3. Install the spark plug cap.

Transmission oil

The transmission must be checked for oil leakage before each ride. If any leakage is found, have a Yamaha dealer check and repair the motorcycle. In addition, the transmission oil must be changed at the intervals specified in the periodic maintenance and lubrication chart.

- Start the engine, warm it up for several minutes, and then turn it off.
- Place the motorcycle on a level surface and hold it in an upright position.
- 3. Place an oil pan under the transmission to collect the used oil.
- 4. Remove the oil filler cap, the drain bolt and the gasket to drain the oil from the transmission.

EAU41445

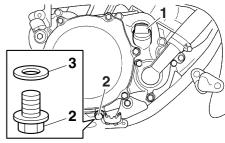

- 1. Transmission oil filler cap
- 2. Transmission oil drain bolt
- Gasket
- Install a new gasket and the transmission oil drain bolt, and then tighten the bolt to the specified torque.

Tightening torque:

Transmission oil drain bolt: 10 Nm (1.0 m·kgf, 7.2 ft·lbf)

 Refill with the specified amount of the recommended transmission oil, and then install and tighten the oil filler cap.

Recommended transmission oil: See page 9-1.

Oil change quantity:

0.50 L (0.53 US qt, 0.44 Imp.qt)

ECA10452

NOTICE

- In order to prevent clutch slippage (since the transmission oil also lubricates the clutch), do not mix any chemical additives. Do not use oils with a diesel specification of "CD" or oils of a higher quality than specified. In addition, do not use oils labeled "ENERGY CONSERVING II" or higher.
- Make sure that no foreign material enters the transmission.
- Start the engine, and then let it idle for several minutes while checking the transmission for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause.


Coolant

The coolant level should be checked before each ride. In addition, the coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart.

EAUM1294

To check the coolant level

- Place the vehicle on a level surface and hold it in an upright position.
- 2. Remove the radiator cap and check the coolant level in the radiator. WARNING! Never attempt to remove the radiator cap when the engine is hot. [EWA10381]

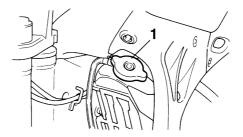

1. Radiator cap


TIP

EAU20070

- The coolant level must be checked on a cold engine since the level varies with engine temperature.
- Make sure that the vehicle is positioned straight up when checking the coolant level. A slight tilt to the side can result in a false reading.

TIP_

The coolant should be at the bottom of the radiator filler neck. The level will change with variation of engine temperature.

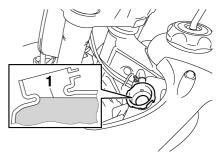

- 1. Correct coolant level
- If the coolant is below this level, add coolant, and then install the radiator cap. NOTICE: If coolant


is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine. If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the cooling system will not be protected against frost and corrosion. If water has been added to the coolant, have a Yamaha dealer check the antifreeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced. [ECA10472]

EAUM1314


To change the coolant

- Place the vehicle on a level surface and let the engine cool if necessary.
- 2. Place a container under the engine to collect the used coolant.
- 3. Remove the coolant drain bolt and the gasket, and then the radiator cap to drain the cooling system.

WARNING! Never attempt to remove the radiator cap when the engine is hot. [EWA10381]

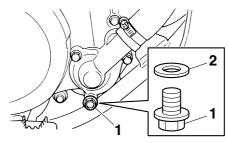

- 1. Coolant drain bolt
- 2. Gasket

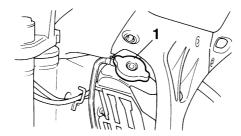

- 1. Radiator cap
 - 4. After the coolant is completely drained, thoroughly flush the cooling system with clean tap water.

Install a new gasket and the coolant drain bolt, and then tighten the bolt to the specified torque.

Tightening torque:

Coolant drain bolt: 10 Nm (1.0 m·kgf, 7.2 ft·lbf)

6. Pour the recommended coolant into the radiator until it is full.

Antifreeze/water mixture ratio:

1:1

Recommended antifreeze:

High-quality ethylene glycol antifreeze containing corrosion inhibitors for aluminum engines

Coolant quantity:

Radiator capacity (including all routes):

0.54 L (0.57 US at, 0.48 Imp.at)


- Install the radiator cap, start the engine, let it idle for several minutes, and then turn it off.
- 8. Remove the radiator cap to check the coolant level in the radiator. If necessary, add sufficient coolant until it reaches the bottom of the radiator filler neck, and then install the radiator cap.

Start the engine, and then check the vehicle for coolant leakage. If coolant is leaking, have a Yamaha dealer check the cooling system.


Cleaning the air filter element

The air filter element should be cleaned or replaced at the intervals specified in the periodic maintenance and lubrication chart. Clean or, if necessary, replace the air filter element more frequently if you are riding in unusually wet or dusty areas.


- 1. Remove the seat. (See page 4-7.)
- 2. Remove the air filter case cover as shown.

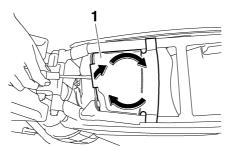


1. Air filter case cover

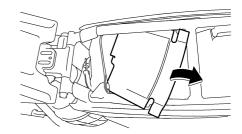


Remove the air filter element by removing the wing bolt and washer.

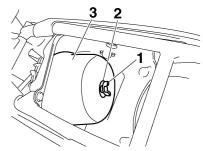

- 1. Wing bolt
- 2. Washer
- 3. Air filter element
- 4. Remove the sponge material from the air filter element frame.

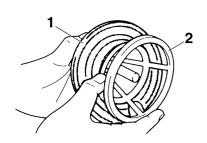

- 1. Sponge material
- 2. Air filter element frame
 - 5. Clean the sponge material with solvent, and then squeeze the remaining solvent out.

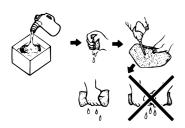

 Apply oil of the recommended type to the entire surface of the sponge material, and then squeeze the excess oil out.

TIP_


The sponge material should be wet but not dripping.

Recommended oil:


Yamaha foam air filter oil or other quality foam air filter oil

- 7. Pull the sponge material over the air filter element frame.
- 8. Insert the air filter element into the air filter case with the projection facing upward, and then install the washer and wing bolt. NOTICE:

 Make sure that the air filter element is properly seated in the air filter case. The engine should never be operated without the air filter element installed, otherwise the piston(s) and/or cylinder(s) may become excessively worn. [ECA10481]

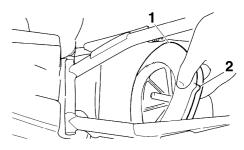

- 1. Air filter element
- 2. Projection
- 9. Install the air filter case cover in the original position as shown.

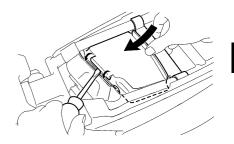

10. Install the seat.

Adjusting the carburetor

The carburetor is an important part of the engine and requires very sophisticated adjustment. Therefore, most carburetor adjustments should be left to a Yamaha dealer, who has the necessary professional knowledge and experience. The adjustment described in the following section, however, may be serviced by the owner as part of routine maintenance.

NOTICE

ECA10550


The carburetor has been set and extensively tested at the Yamaha factory. Changing these settings without sufficient technical knowledge may result in poor performance of or damage to the engine.

EAU42110

Adjusting the engine idling speed

The engine idling speed must be adjusted when necessary.


- 1. Start the engine and thoroughly warm it up.
- 2. Turn the throttle stop screw until the engine runs at the lowest possible speed.
- To increase the engine idling speed, turn the throttle stop screw in direction (a). To decrease the engine idling speed, turn the throttle stop screw in direction (b).

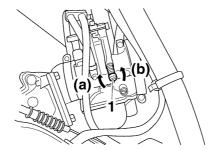

1. Throttle stop screw

EAU21370

Adjusting the throttle cable free play

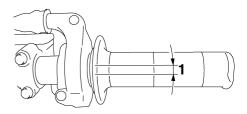

1. Throttle cable free play

The throttle cable free play should measure 3.0–5.0 mm (0.12–0.20 in) at the throttle grip. Periodically check the throttle cable free play and, if necessary, adjust it as follows.


TIP

FAU44390

The engine idling speed must be correctly adjusted before checking and adjusting the throttle cable free play.

1. Loosen the locknut.

 To increase the throttle cable free play, turn the adjusting nut in direction (a). To decrease the throttle cable free play, turn the adjusting nut in direction (b).

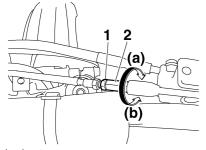

- 1. Locknut
- 2. Throttle cable free play adjusting nut
 - 3. Tighten the locknut.

Tires

To maximize the performance, durability, and safe operation of your motorcycle, note the following points regarding the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EWA14381

WARNING

Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).
- The tire air pressure must be adjusted in accordance with the weight of the rider, the riding speed, and the riding conditions.


Standard tire air pressure:

Front:

100 kPa (1.00 kgf/cm², 15 psi) Rear:

100 kPa (1.00 kgf/cm², 15 psi)

Tire inspection

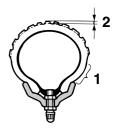

- 1. Tire sidewall
- 2. Tire tread depth

The tires must be checked before each ride.

ECA15580

NOTICE

 Be sure the bead stoppers are tightened. Loose bead stoppers will cause the tire to slip off the rim if tire pressure is too low.

Be sure the valve stem is positioned straight. A tilted valve stem indicates that the tire has slipped from its original position on the rim. Rotate the tire so that the valve stem is positioned straight.

If the center tread depth reaches the specified limit, if the tire has a nail or glass fragments in it, or if the sidewall is cracked, have a Yamaha dealer replace the tire immediately.

Minimum tire tread depth (front and rear):

4.0 mm (0.16 in)

Tire information

This motorcycle is equipped with spoke wheels and tube tires.

EWA10461

WARNING

The front and rear tires should be of the same make and design, otherwise the handling characteristics of the vehicle may be different, which could lead to an accident. After extensive tests, only the tires listed below have been approved for this model by Yamaha Motor Co., Ltd.

Front tire:

Size:

YZ85 70/100-17 40M YZ85LW 70/100-19 42M YZ85LWZ 70/100-19 42M YZ85Z 70/100-17 40M Manufacturer/model:

YZ85 DUNLOP/D739FA (ZAF) YZ85 DUNLOP/D756F

(AUT)(BEL)(CHE)(DEU)(DNK)(ES P)(FIN)(FRA)(GBR)(GRC)(IRL)(IT A)(NLD)(NOR)(POL)(PRT)(SVN)(SWE) YZ85LW DUNLOP/D739FA (ZAF)

YZ85LW DUNLOP/D756F (AUT)(BEL)(CHE)(DEU)(DNK)(ES P)(FIN)(FRA)(GBR)(GRC)(IRL)(IT A)(NLD)(NOR)(POL)(PRT)(SVN)(SWE)

YZ85LWZ DUNLOP/D756F YZ85Z DUNLOP/D756F

Rear tire:

Size:

YZ85 90/100-14 49M YZ85LW 90/100-16 52M YZ85LWZ 90/100-16 52M YZ85Z 90/100-14 49M Manufacturer/model: DUNLOP/D756

WARNING

 Have a Yamaha dealer replace excessively worn tires. Operating the motorcycle with excessively worn tires decreases riding stability and can lead to loss of control.

EWA14390

- The replacement of all wheeland brake-related parts, including the tires, should be left to a Yamaha dealer, who has the necessary professional knowledge and experience.
- It is not recommended to patch a punctured tube. If unavoidable, however, patch the tube very carefully and replace it as soon as possible with a highquality product.

Spoke wheels

EAU48320

EWA10610


M WARNING

The wheels on this model are not designed for use with tubeless tires. Do not attempt to use tubeless tires on this model.

To maximize the performance, durability, and safe operation of your motorcycle, note the following points regarding the specified wheels.

- The wheel rims should be checked for cracks, bends or warpage, and the spokes for looseness or damage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life.

Adjusting the clutch lever free play

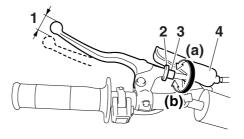

- 1. Clutch lever free play
- 2. Locknut (clutch lever)
- 3. Clutch lever free play adjusting bolt
- 4. Rubber cover

The clutch lever free play should measure 10.0–15.0 mm (0.39–0.59 in) as shown. Periodically check the clutch lever free play and, if necessary, adjust it as follows.


- Slide the rubber cover back at the clutch lever.
- 2. Loosen the locknut.
- 3. To increase the clutch lever free play, turn the clutch lever free play adjusting bolt in direction (a). To

decrease the clutch lever free play, turn the adjusting bolt in direction (b).

TIP

If the specified clutch lever free play could be obtained as described above, skip steps 4–7.

- 4. Fully turn the adjusting bolt in direction (a) to loosen the clutch cable.
- 5. Loosen the locknut further down the clutch cable.

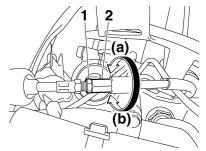


- 1. Locknut (clutch cable)
- 2. Clutch lever free play adjusting nut (clutch cable)
 - To increase the clutch lever free play, turn the clutch lever free play adjusting nut in direction (a). To

decrease the clutch lever free play, turn the adjusting nut in direction (b).

- 7. Tighten the locknut at the clutch cable.
- 8. Tighten the locknut at the clutch lever, and then slide the rubber cover to its original position.

Checking the front brake lever free play

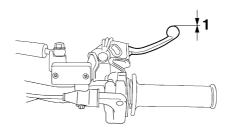

1. No brake lever free play

There should be no free play at the brake lever end. If there is free play, have a Yamaha dealer inspect the brake system.

EWA14211

WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a Yamaha dealer bleed the system before operating the vehicle. Air in the hydraulic system will diminish the

braking performance, which may result in loss of control and an accident.

FAU46291

PERIODIC MAINTENANCE AND ADJUSTMENT

Checking the shift pedal

The operation of the shift pedal should be checked before each ride. If operation is not smooth, have a Yamaha dealer check the vehicle.

EAU44820


EA

Checking the front and rear brake pads

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

EAU22410

Front brake pads

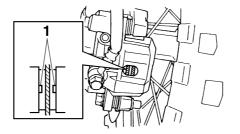


1. Brake pad wear indicator

Each front brake pad is provided with a wear indicator, which allows you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the position of the wear indicator while applying the brake. If a brake pad has worn to the

point that the wear indicator almost touches the brake disc, have a Yamaha dealer replace the brake pads as a set.

Rear brake pads

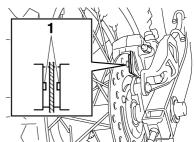


1. Brake pad wear indicator groove

Each rear brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that a wear indicator groove almost appears, have a Yamaha dealer replace the brake pads as a set.


Checking the brake fluid level

Front brake

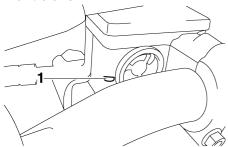

1. Minimum level mark

Rear brake

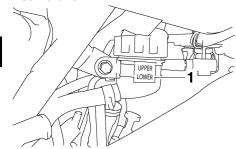

1. Minimum level mark

Insufficient brake fluid may allow air to enter the brake system, possibly causing it to become ineffective.

Before riding, check that the brake fluid is above the minimum level mark and replenish if necessary. A low brake fluid level may indicate worn brake pads and/or brake system leakage. If the brake fluid level is low, be sure to check the brake pads for wear and the brake system for leakage.

Observe these precautions:

- When checking the fluid level, make sure that the top of the brake fluid reservoir is level.
- Use only the recommended quality brake fluid, otherwise the rubber seals may deteriorate, causing leakage and poor braking performance.

Recommended brake fluid:

 Refill with the same type of brake fluid. Mixing fluids may result in a harmful chemical reaction and lead to poor braking performance.

- Be careful that water does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.
- Brake fluid may deteriorate painted surfaces or plastic parts. Always clean up spilled fluid immediately.
- As the brake pads wear, it is normal for the brake fluid level to gradually go down. However, if the brake fluid level goes down suddenly, have a Yamaha dealer check the cause.

Changing the brake fluid

Have a Yamaha dealer change the brake fluid at the intervals specified in the TIP after the periodic maintenance and lubrication chart. In addition, have the oil seals of the master cylinders and calipers as well as the brake hoses replaced at the intervals listed below or whenever they are damaged or leaking.

- Oil seals: Replace every two years.
- Brake hoses: Replace every four years.

Drive chain slack

The drive chain slack should be checked before each ride and adjusted if necessary.

EAU41410

EAU22760

To check the drive chain slack

1. Install the removable sidestand and place the motorcycle on it.

TIP_


EAU22731

When checking and adjusting the drive chain slack, there should be no weight on the motorcycle.

- 2. Shift the transmission into the neutral position.
- Move the rear wheel by pushing the motorcycle to locate the tightest portion of the drive chain, and then measure the drive chain slack as shown.

Drive chain slack:

35.0-45.0 mm (1.38-1.77 in)

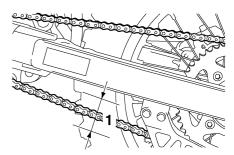

- 1. Drive chain slack
- 4. If the drive chain slack is incorrect, adjust it as follows.

EAU41482


To adjust the drive chain slack

- 1. Loosen the axle nut and the locknut on each side of the swingarm.
- 2. To tighten the drive chain, turn the drive chain slack adjusting bolt on each side of the swingarm in direction (a). To loosen the drive chain, turn the adjusting bolt on each side of the swingarm in direction (b), and then push the rear wheel forward. *NOTICE:* Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead

to chain slippage or breakage. To prevent this from occurring, keep the drive chain slack within the specified limits. [ECA10571]

TIP

Using the alignment marks on each drive chain puller, make sure that both drive chain pullers are in the same position for proper wheel alignment.

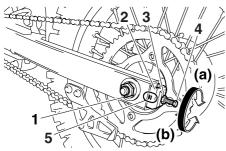

- 1. Axle nut
- 2. Drive chain puller
- 3. Locknut
- 4. Drive chain slack adjusting bolt
- 5. Alignment marks
- 3. Tighten both locknuts and the axle nut to the specified torques.

Tightening torques:

Locknut: 16 Nm (1.6 m·kgf, 11 ft·lbf) Axle nut: 90 Nm (9.0 m·kgf, 65 ft·lbf) EAU23015

Cleaning and lubricating the drive chain

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

ECA10582

NOTICE

The drive chain must be lubricated after washing the motorcycle and riding in the rain or wet areas.

1. Remove all dirt and mud from the drive chain with a brush or cloth.

TIP

For a thorough cleaning, have a Yamaha dealer remove the drive chain and soak it in solvent.

 Spray Yamaha Chain and Cable Lube or a high-quality spray-type drive chain lubricant on the entire chain, making sure that all side plates and rollers have been sufficiently oiled.

EAU23142

PERIODIC MAINTENANCE AND ADJUSTMENT

EAU41842

Checking and lubricating the cables

The operation of all control cables and the condition of the cables should be checked before each ride, and the cables and cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.

[EWA10711]

Recommended lubricant:


Yamaha Chain and Cable Lube or 4stroke engine oil Checking and lubricating the throttle grip and cable

The operation of the throttle grip should be checked before each ride. In addition, the cable should be lubricated at the intervals specified in the periodic maintenance chart.


EAU23111

Checking and lubricating the brake and clutch levers

Brake lever

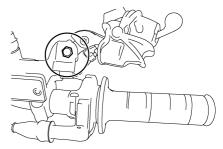

Clutch lever

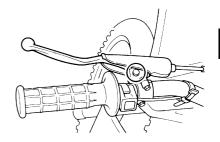

The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.


Recommended lubricants:

Brake lever:

Silicone grease Clutch lever:

Lithium-soap-based grease

Checking and lubricating the brake pedal

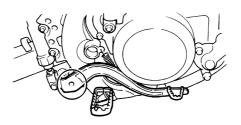


The operation of the brake pedal should be checked before each ride, and the pedal pivot should be lubricated if necessary.

Recommended lubricant:

Lithium-soap-based grease

the Lubricating the swingarm pivots

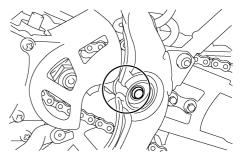

The swingarm pivots must be lubricated at the intervals specified in the periodic maintenance and lubrication chart.


Recommended lubricant:

Lithium-soap-based grease

FAU23272

EAU23250

Lubricating the rear suspension

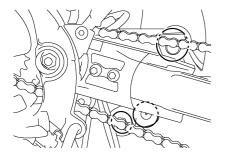

The pivoting points of the rear suspension must be lubricated at the intervals specified in the periodic maintenance and lubrication chart.

Recommended lubricant: Lithium-soap-based grease

Checking the front fork

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.

To check the operation

- Place the vehicle on a level surface and hold it in an upright position. WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over. [EWA10751]
- While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.



ECA10590

NOTICE

If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.


Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

- 1. Place a stand under the engine to raise the front wheel off the ground. (See page 7-26 for more WARNING! information.) To avoid injury, securely support the vehicle so there is no danger of it falling over. [EWA10751]
- 2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.



FAU23283 Checking the wheel bearings

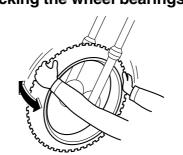

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

Supporting the motorcycle

EAU24350


Since this model is not equipped with a centerstand, follow these precautions when removing the front and rear wheel or performing other maintenance requiring the motorcycle to stand upright. Check that the motorcycle is in a stable and level position before starting any maintenance. A strong wooden box can be placed under the engine for added stability.

To service the front wheel

- 1. Stabilize the rear of the motorcycle by using a motorcycle stand or, if an additional motorcycle stand is not available, by placing a jack under the frame in front of the rear wheel
- 2. Raise the front wheel off the ground by using a motorcycle stand.

To service the rear wheel

Raise the rear wheel off the ground by using a motorcycle stand or, if a motorcycle stand is not available, by placing

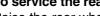

a jack either under each side of the frame in front of the rear wheel or under each side of the swingarm.

Front wheel

EAU24360

To remove the front wheel


EAU41341

EWA10821


WARNING

To avoid injury, securely support the vehicle so there is no danger of it falling over.

1. Loosen the axle nut.

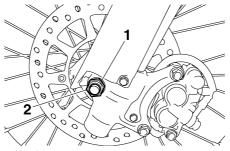

- 1. Washer
- 2. Axle nut
 - 2. Lift the front wheel off the ground according to the procedure on page 7-26.
- 3. Remove the axle nut and washer.
- 4. Pull the wheel axle out, and then remove the wheel.

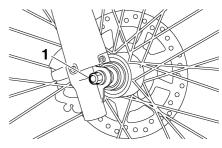

1. Wheel axle

EAU41421

To install the front wheel

- 1. Lift the wheel up between the fork legs.
- 2. Insert the wheel axle from the right side.
- 3. Lower the front wheel so that it is on the ground, install the removable sidestand, and then rest the motorcycle on it.
- 4. Install the washer and axle nut, and then tighten the axle nut to the specified torque.

Tightening torque:

Axle nut:

70 Nm (7.0 m·kgf, 50 ft·lbf)

Rear wheel

EAU25080

To remove the rear wheel


EAU41312

EWA10821

WARNING

To avoid injury, securely support the vehicle so there is no danger of it falling over.

- 1. Loosen the axle nut.
- Lift the rear wheel off the ground according to the procedure on page 7-26.
- Loosen the locknut and drive chain adjusting bolt on each side of the swingarm.
- 4. Remove the axle nut and washer.

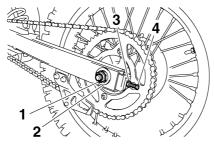


- 1. Axle nut
- 2. Washer
- 3. Locknut
- 4. Drive chain slack adjusting bolt
- Push the wheel forward, and then remove the drive chain from the rear sprocket.

TIP

- If the drive chain is difficult to remove, remove the wheel axle first, and then lift the wheel upward enough to remove the drive chain from the rear sprocket.
- The drive chain does not need to be disassembled in order to remove and install the rear wheel.

6. While supporting the brake caliper and slightly lifting the wheel, pull the wheel axle out.

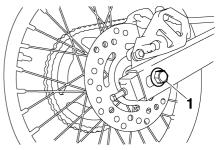

1. Wheel axle

TIP

A rubber mallet may be useful to tap the wheel axle out.

 Remove the wheel. NOTICE: Do not apply the brake after the wheel has been removed together with the brake disc, otherwise the brake pads will be forced shut. [ECAL1071]

EAU41325


To install the rear wheel

 Install the drive chain onto the rear sprocket.

2. Install the wheel and the brake caliper bracket by inserting the wheel axle from the right-hand side.

TIP

- Make sure that the slot in the brake caliper bracket is fit over the retainer on the swingarm.
- Make sure that there is enough space between the brake pads before installing the wheel.

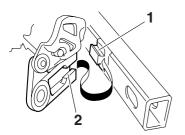

- 1. Retainer
- 2. Slot
 - 3. Install the washer and axle nut.
 - Lower the rear wheel so that it is on the ground, install the removable sidestand, and then rest the motorcycle on it.

- 5. Adjust the drive chain slack. (See page 7-21.)
- 6. Tighten the locknuts and the axle nut to their specified torques.

Tightening torque:

Locknut:

16 Nm (1.6 m·kgf, 11 ft·lbf)
Axle nut:

90 Nm (9.0 m·kgf, 65 ft·lbf)

Troubleshooting

loss of power.

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15141

EAU25871

WARNING


When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water

heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.

Troubleshooting charts

EAU41492

Starting problems or poor engine performance

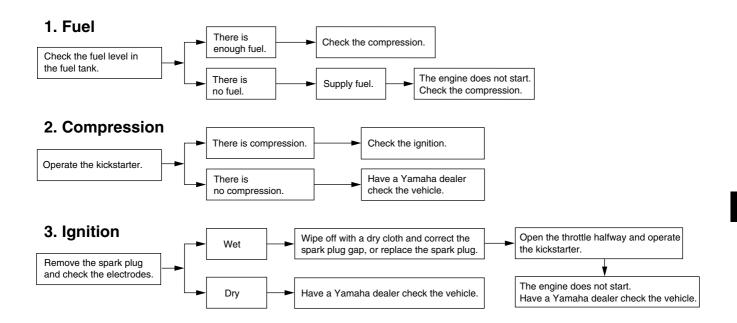


Engine overheating

WARNING

 Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.

Place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.

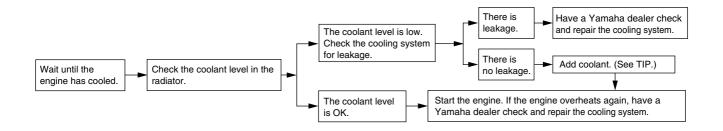

TIP

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible.

EAU41356

Matte color caution

EAU37833

ECA15192

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

Care

While the open design of a motorcycle reveals the attractiveness of the technology, it also makes it more vulnerable. Rust and corrosion can develop even if high-quality components are used. A rusty exhaust pipe may go unnoticed on a car, however, it detracts from the overall appearance of a motorcycle. Frequent and proper care does not only comply with the terms of the warranty, but it will also keep your motorcycle looking good, extend its life and optimize its performance.

Before cleaning

- 1. Cover the muffler outlet with a plastic bag after the engine has cooled down.
- Make sure that all caps and covers as well as all electrical couplers and connectors, including the spark plug cap, are tightly installed.
- Remove extremely stubborn dirt, like oil burnt onto the crankcase, with a degreasing agent and a brush, but never apply such prod-

ucts onto seals, gaskets, sprockets, the drive chain and wheel axles. Always rinse the dirt and degreaser off with water.

Cleaning

ECA10772

NOTICE

- Avoid using strong acidic wheel cleaners, especially on spoked wheels. If such products are used on hard-to-remove dirt, do not leave the cleaner on the affected area any longer than instructed. Also, thoroughly rinse the area off with water, immediately dry it, and then apply a corrosion protection spray.
- Improper cleaning can damage plastic parts (such as cowlings, panels, windshields, headlight lenses, meter lenses, etc.) and the mufflers. Use only a soft, clean cloth or sponge with water to clean plastic. However, if the plastic parts cannot be thoroughly cleaned with water, diluted mild detergent with water may be used. Be sure to rinse

- off any detergent residue using plenty of water, as it is harmful to plastic parts.
- Do not use any harsh chemical products on plastic parts. Be sure to avoid using cloths or sponges which have been in contact with strong or abrasive cleaning products, solvent or thinner, fuel (gasoline), rust removers or inhibitors, brake fluid, antifreeze or electrolyte.
- Do not use high-pressure washers or steam-jet cleaners since they cause water seepage and deterioration in the following areas: seals (of wheel and swingarm bearings, fork and brakes), electric components (couplers, connectors, instruments, switches and lights), breather hoses and vents.
- For motorcycles equipped with a windshield: Do not use strong cleaners or hard sponges as they will cause dulling or scratching. Some cleaning compounds for plastic may leave scratches on the windshield.

Test the product on a small hidden part of the windshield to make sure that it does not leave any marks. If the windshield is scratched, use a quality plastic polishing compound after washing.

After normal use

Remove dirt with warm water, a mild detergent, and a soft, clean sponge, and then rinse thoroughly with clean water. Use a toothbrush or bottlebrush for hard-to-reach areas. Stubborn dirt and insects will come off more easily if the area is covered with a wet cloth for a few minutes before cleaning.

After riding in the rain or near the sea Since sea salt is extremely corrosive, carry out the following steps after each ride in the rain or near the sea.

Clean the motorcycle with cold water and a mild detergent, after the engine has cooled down.
 NOTICE: Do not use warm water since it increases the corrosive action of the salt. [ECA10791]

 Apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces to prevent corrosion.

After cleaning

- 1. Dry the motorcycle with a chamois or an absorbing cloth.
- 2. Immediately dry the drive chain and lubricate it to prevent it from rusting.
- Use a chrome polish to shine chrome, aluminum and stainlesssteel parts, including the exhaust system.
- To prevent corrosion, it is recommended to apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces.
- 5. Use spray oil as a universal cleaner to remove any remaining dirt.
- 6. Touch up minor paint damage caused by stones, etc.
- 7. Wax all painted surfaces.
- 8. Let the motorcycle dry completely before storing or covering it.

WARNING

EWA11131

Contaminants on the brakes or tires can cause loss of control.

- Make sure that there is no oil or wax on the brakes or tires.
- If necessary, clean the brake discs and brake linings with a regular brake disc cleaner or acetone, and wash the tires with warm water and a mild detergent. Before riding at higher speeds, test the motorcycle's braking performance and cornering behavior.

ECA10800

NOTICE

- Apply spray oil and wax sparingly and make sure to wipe off any excess.
- Never apply oil or wax to any rubber and plastic parts, but treat them with a suitable care product.
- Avoid using abrasive polishing compounds as they will wear away the paint.

TIP

Consult a Yamaha dealer for advice on what products to use.

Storage

Short-term

Always store your motorcycle in a cool, dry place and, if necessary, protect it against dust with a porous cover.

ECA10810

EAU41513

NOTICE

- Storing the motorcycle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.
- To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.

Long-term

Before storing your motorcycle for several months:

- 1. Follow all the instructions in the "Care" section of this chapter.
- 2. For motorcycles equipped with a fuel cock that has an "OFF" position: Turn the fuel cock lever to "OFF".

- Drain the fuel tank and fuel lines, and the carburetor float chamber by loosening the drain bolt; this will prevent fuel deposits from building up.
- 4. Perform the following steps to protect the cylinder, piston rings, etc. from corrosion.
 - a. Remove the spark plug cap and spark plug.
 - b. Pour a teaspoonful of engine oil into the spark plug bore.
 - c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
 - d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.)
 - e. Remove the spark plug cap from the spark plug, and then install the spark plug and the spark plug cap. WARNING! To prevent damage or injury from sparking, make sure to

ground the spark plug electrodes while turning the engine over. [EWA10951]

- Lubricate all control cables and the pivoting points of all levers and brake pedal.
- Check and, if necessary, correct the tire air pressure, and then lift the motorcycle so that both of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tires from becoming degraded in one spot.
- Cover the muffler outlet with a plastic bag to prevent moisture from entering it.

TIP

Make any necessary repairs before storing the motorcycle.

SPECIFICATIONS

Dimensions:	Ground clearance:	Cooling system:
Overall length:	YZ85 351 mm (13.82 in)	Radiator capacity (including all routes):
YZ85 1818 mm (71.6 in)	YZ85LW 393 mm (15.47 in)	0.54 L (0.57 US at, 0.48 Imp.at)
(AUT)(BEL)(CHE)(DEU)(DNK)(ESP)(FIN)	YZ85LWZ 393 mm (15.47 in)	Air filter:
(FRA)(GBR)(GRC)(IRL)(ITA)(NLD)(NOR)	YZ85Z 351 mm (13.82 in)	Air filter element:
(POL)(PRT)(SVN)(SWE)	Weight:	Wet element
YZ85 1821 mm (71.7 in) (ZAF)	With oil and fuel:	Fuel:
YZ85LW 1903 mm (74.9 in)	YZ85 71.0 kg (157 lb)	Recommended fuel:
YZ85LWZ 1903 mm (74.9 in)	YZ85LW 73.9 kg (163 lb)	Premium unleaded gasoline only
YZ85Z 1818 mm (71.6 in)	YZ85LWZ 73.9 kg (163 lb)	Fuel tank capacity:
Overall width:	YZ85Z 71.0 kg (157 lb)	5.0 L (1.32 US gal, 1.10 Imp.gal)
758 mm (29.8 in)	Engine:	Carburetor:
Overall height:	Engine type:	Type × quantity:
YZ85 1161 mm (45.7 in)	Liquid cooled 2-stroke	PWK28 x 1
YZ85LW 1205 mm (47.4 in)	Cylinder arrangement:	Spark plug (s):
YZ85LWZ 1205 mm (47.4 in)	Forward-inclined single cylinder	Manufacturer/model:
YZ85Z 1161 mm (45.7 in)	Displacement:	NGK/BR10EG
Seat height:	84 cm ³	Spark plug gap:
YZ85 864 mm (34.0 in)	Bore × stroke:	0.5–0.6 mm (0.020–0.024 in)
YZ85LW 904 mm (35.6 in)	$47.5 \times 47.8 \text{ mm } (1.87 \times 1.88 \text{ in})$	Clutch:
YZ85LWZ 904 mm (35.6 in)	Compression ratio:	Clutch type:
YZ85Z 864 mm (34.0 in)	8.20 :1	Wet, multiple-disc
Wheelbase:	Starting system:	Transmission:
YZ85 1255 mm (49.4 in)	Kickstarter	Primary reduction system:
(AUT)(BEL)(CHE)(DEU)(DNK)(ESP)(FIN)	Lubrication system:	Spur gear
(FRA)(GBR)(GRC)(IRL)(ITA)(NLD)(NOR)	Premix	Primary reduction ratio:
(POL)(PRT)(SVN)(SWE)	Engine oil:	65/18 (3.611)
YZ85 1258 mm (49.5 in) (ZAF) YZ85LW 1286 mm (50.6 in)	Type:	Secondary reduction system:
YZ85LWZ 1286 mm (50.6 in)	YAMALUBE 2-R	Chain drive
YZ85Z 1255 mm (49.4 in)	Transmission oil:	
12002 1200 11111 (40.4 111)	Type:	
	YAMALUBE 4 (10W-40) or SAF 10W-40	

Oil change quantity: 0.50 L (0.53 US qt, 0.44 Imp.qt)

SPECIFICATIONS

Secondary reduction ratio:	Trail:	Manufacturer/model:
YZ85 47/14 (3.357) (ZAF)	YZ85 88.0 mm (3.46 in)	DUNLOP/D756
YZ85 48/14 (3.428)	YZ85LW 106.0 mm (4.17 in)	Tire air pressure (measured on col
(AUT)(BEL)(CHE)(DEU)(DNK)(ESP)(FIN)	YZ85LWZ 106.0 mm (4.17 in)	tires):
(FRA)(GBR)(GRC)(IRL)(ITA)(NLD)(NOR)	YZ85Z 88.0 mm (3.46 in)	Front:
(POL)(PRT)(SVN)(SWE)	Front tire:	100 kPa (1.00 kgf/cm², 15 psi)
YZ85LW 52/14 (3.714)	Type:	Rear:
YZ85LWZ 52/14 (3.714)	With tube	100 kPa (1.00 kgf/cm ² , 15 psi)
YZ85Z 48/14 (3.428)	Size:	Front wheel:
Transmission type:	YZ85 70/100-17 40M	Wheel type:
Constant mesh 6-speed	YZ85LW 70/100-19 42M	Spoke wheel
Operation:	YZ85LWZ 70/100-19 42M	Rim size:
Left foot operation	YZ85Z 70/100-17 40M	YZ85 17x1.40
Gear ratio:	Manufacturer/model:	YZ85LW 19x1.40
1st:	YZ85 DUNLOP/D739FA (ZAF)	YZ85LWZ 19x1.40
27/11 (2.454)	YZ85 DUNLOP/D756F	YZ85Z 17x1.40
2nd:	(AUT)(BEL)(CHE)(DEU)(DNK)(ESP)(FIN)	Rear wheel:
32/17 (1.882)	(FRA)(GBR)(GRC)(IRL)(ITA)(NLD)(NOR)	Wheel type:
3rd:	(POL)(PRT)(SVN)(SWE)	Spoke wheel
26/17 (1.529)	YZ85ĹW DÚNLOP/D739FA (ZAF)	Rim size:
4th:	YZ85LW DUNLOP/D756F	YZ85 14x1.60
22/17 (1.294)	(AUT)(BEL)(CHE)(DEU)(DNK)(ESP)(FIN)	YZ85LW 16x1.85
5th:	(FRA)(GBR)(GRC)(IRL)(ITA)(NLD)(NOR)	YZ85LWZ 16x1.85
26/23 (1.130)	(POL)(PRT)(SVN)(SWE)	YZ85Z 14x1.60
6th:	YZ85LWZ DUNLOP/D756F	
25/25 (1.000)	YZ85Z DUNLOP/D756F	Front brake:
hassis:	Rear tire:	Type:
Frame type:	Type:	Single disc brake
Semi double cradle	With tube	Operation:
Caster angle:	Size:	Right hand operation
YZ85 26.30 °	YZ85 90/100-14 49M	Recommended fluid:
YZ85LW 27.00 °	YZ85LW 90/100-16 52M	DOT 4
YZ85LWZ 27.00 °	YZ85LWZ 90/100-16 52M	Rear brake:
YZ85Z 26.30 °	YZ85Z 90/100-14 49M	Type:
000.00	1 2002 30/ 100-14 43W	Single disc brake

Operation:

Right foot operation

Recommended fluid:

DOT 4

Front suspension:

Type:

Telescopic fork

Spring/shock absorber type:

Coil spring/oil damper

Wheel travel:

275.0 mm (10.83 in)

Rear suspension:

Type:

Swingarm (link suspension)

Spring/shock absorber type:

Coil spring/gas-oil damper

Wheel travel:

YZ85 282.0 mm (11.10 in)

YZ85LW 287.0 mm (11.30 in)

YZ85LWZ 287.0 mm (11.30 in)

YZ85Z 282.0 mm (11.10 in)

Electrical system:

Ignition system:

CDI


Identification numbers

Record the vehicle identification number and model label information in the spaces provided below for assistance when ordering spare parts from a Yamaha dealer or for reference in case the vehicle is stolen.


VEHICLE IDENTIFICATION NUMBER:



MODEL LABEL INFORMATION:

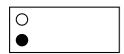

Vehicle identification number

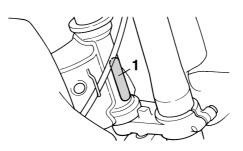

1. Vehicle identification number

The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.


TIF

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

Model label

EAU26400

EAU26460

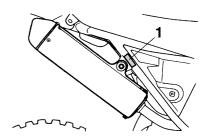

Model label

The model label is affixed to the location shown. Record the information on this label in the space provided. This information will be needed when ordering spare parts from a Yamaha dealer.

INDEX

_	
Α	
Air filter element, cleaning 7-1	2
В	
Brake and clutch levers, checking and	
lubricating7-2	3
Brake fluid, changing 7-2	1
Brake fluid level, checking 7-2	
Brake lever4-	
Brake pedal 4-	
Brake pedal, checking and	
lubricating	4
C	•
Cables, checking and lubricating 7-2	3
Carburetor, adjusting	
Care	
Clutch lever	
Clutch lever free play, adjusting 7-1	
Coolant	
D	٠
Drive chain, cleaning and lubricating 7-2	2
Drive chain, cleaning and lubricating 7-2 Drive chain slack	
E	1
	_
Engine break-in6-	
Engine idling speed	
Engine, starting a warm6-	
Engine stop button4-	1
F	
Front and rear brake pads, checking 7-1	
Front brake lever free play, checking 7-1	
Front fork, adjusting4-	
Front fork, bleeding4-	
Front fork, checking7-2	5
Fuel4-	3
Fuel cock 4-	5

Fuel tank breather hose	4-
Fuel tank cap	
Н	
Handlebar switch	4- [.]
1	
Identification numbers	10-
K	
Kickstarter	4-6
L	
Labels, location	1-1
M	
Matte color, caution	8-
Model label	
P	
Parking	6-4
Part locations	
Periodic maintenance and lubrication	
chart	
R	
Rear suspension, lubricating	7-2
S	
Safety information	2-
Seat	
Shifting	
Shift pedal	
Shift pedal, checking	
Shock absorber assembly, adjusting	
Sidestand	
Spark plug, checking	7-8
Specifications	9-
Starter (choke) knob	
Starting and warming up a cold engir	ne6-
Steering, checking	7-20
Storage	8-3

Supporting the motorcycle	
Swingarm pivots, lubricating	. 7-24
Γ	
Throttle cable free play, adjusting	. 7-14
Throttle grip and cable, checking and	
lubricating	. 7-23
Tires	. 7-15
Transmission oil	7-9
Troubleshooting	. 7-29
Troubleshooting charts	
l garage	
Vehicle identification number	. 10-1
V	
Wheel bearings, checking	. 7-26
Wheel (front)	
Wheel (rear)	
Wheels	

